

PROVETRO IMPULS

FROM CHICKS AND BUNNIES

# FROM CHICKS AND BUNNIES



**MATERIAL**

- Basic Tools x Provetro Tools
- 3mm Fusing glass
- Glass powder
- Kanthal wire 1mm (3529010)

**STEP 1**

Create a pattern of your own design, or use our free design sheet.



**STEP 2**

Place the pattern on the glass, transfer the shapes to the glass and cut them out with a glass cutter.



**STEP 3**

Form a frame out of the kanthal wire, which will be the suspension after that. The kanthal wire also is perfect to model the feet, claws, tulips and other filiree designs.

**STEP 4**

Decorate the glass for example with powder in screenprinting technique or with frits, stringers confetti and so on.

If everything is to your satisfaction, put the glass into your kiln. Make sure that the wire between the glass pieces is held in position during the fusing process.. Thus, the wire does not slip, fix it with some stones in the kiln.



**FIRING SCHEDULE FOR SYSTEM 96**


- |    |         |   |       |
|----|---------|---|-------|
| 1. | 160 min | - | 500°C |
| 2. | Skip    | - | 750°C |
| 3. | 30 min  | - | 750°C |
| 4. | Skip    | - | 540°C |
| 5. | 160 min | - | 540°C |
| 6. | 160 min | - | 510°C |
| 8. | Ende    |   |       |




These objects in your window and you can feel the spring!

\*All statements without guarantee

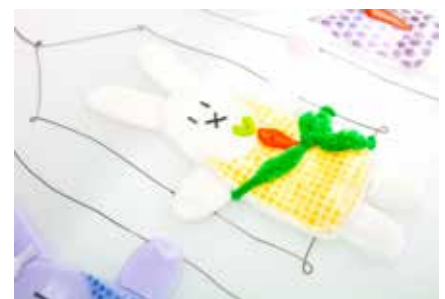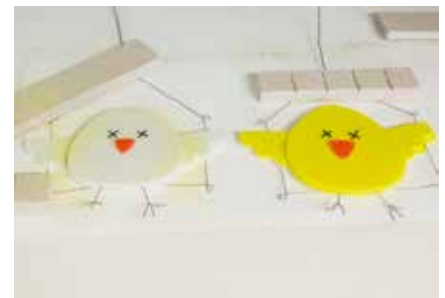


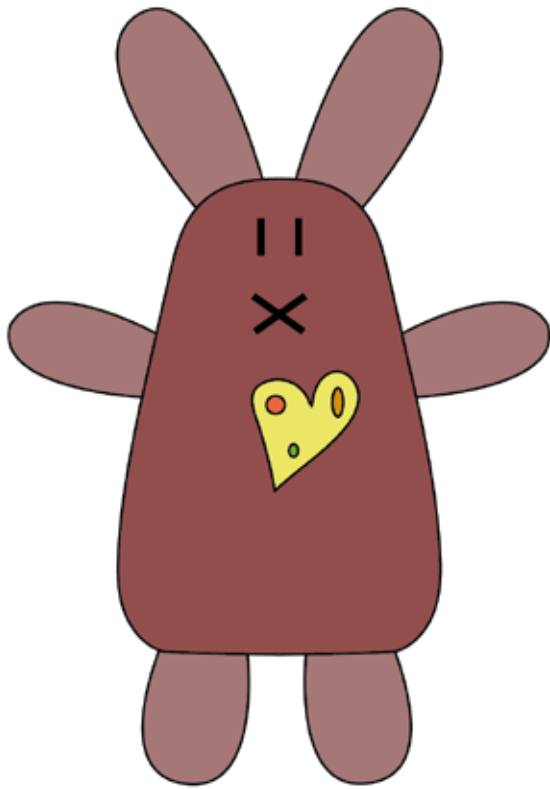



Ohr / Ear x 4

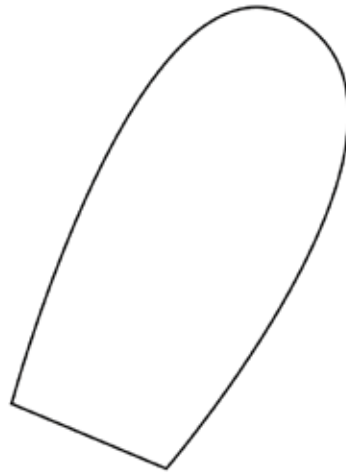

Körper / Body x 2

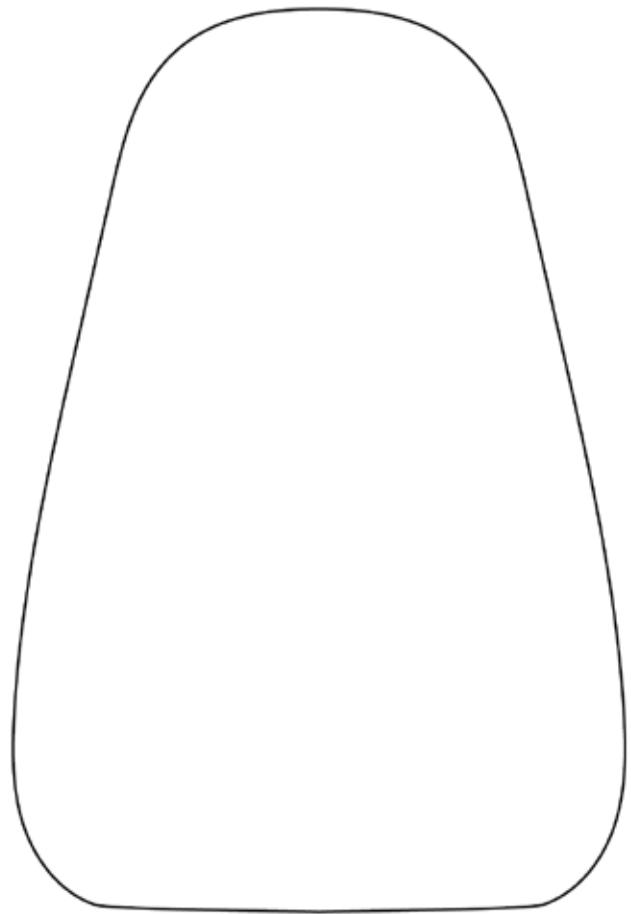


Herz / Heart x 1

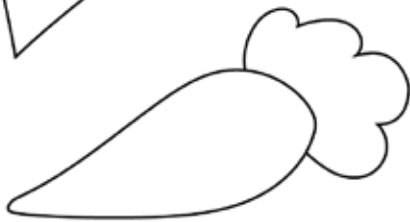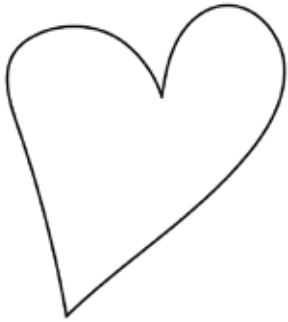



Möhre / Carrot x 1

Arm / Arm x 4


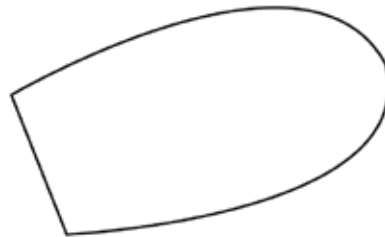


Bein / Leg x 4

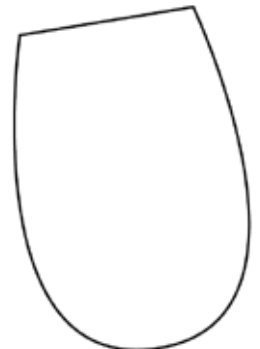


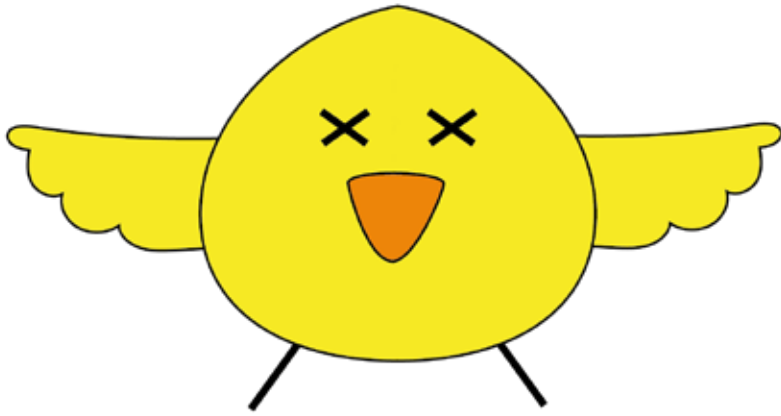

Körper / Body x 2

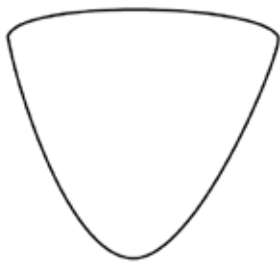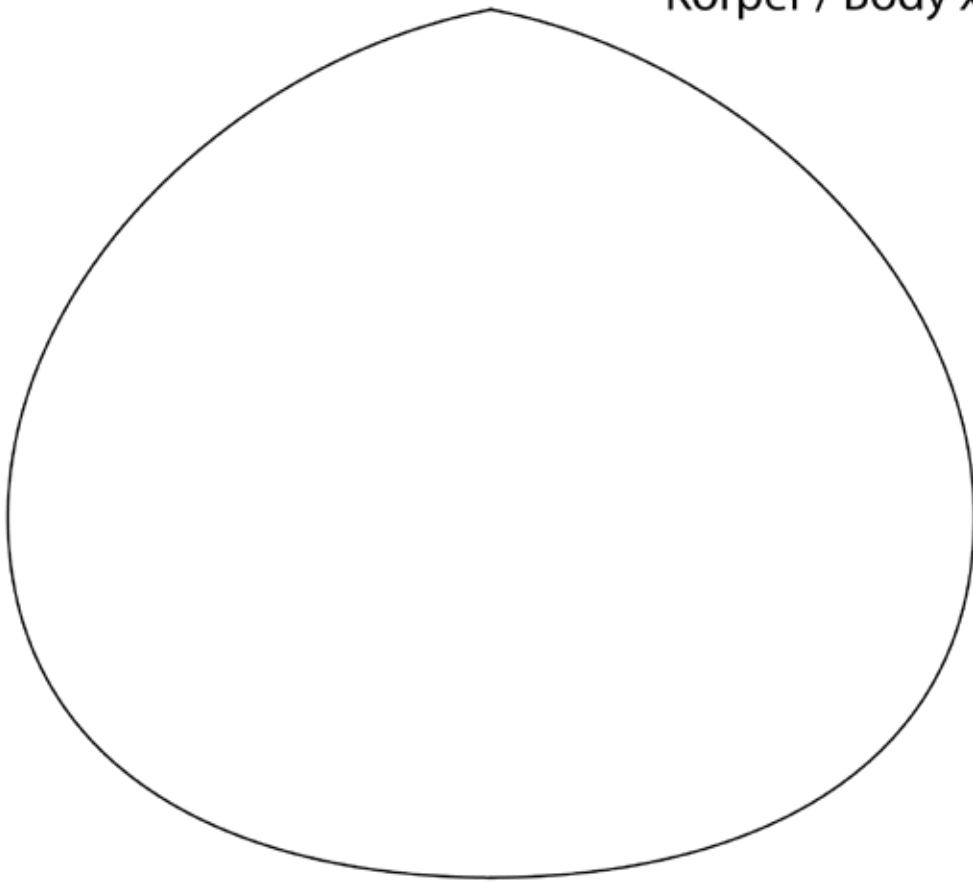

Schnabel / Spout x 1

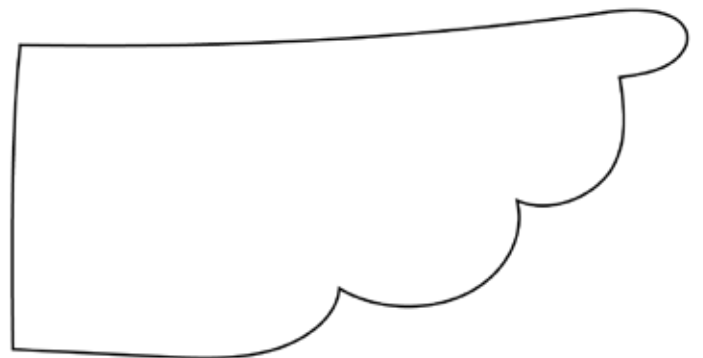

Flügel / Wing x 4